

ARIES OFFROAD

INSTRUCTION SHEET 2004-10 TITAN TRUCK / 204-10 TITAN ARMADA BULL BAR PART# B35-9001 / 35-9001


<u>QTY.</u>	<u>ITEM</u>	<u>CONTENT</u>
1	1	BULL BAR
4	2	RUBBER BUMPER
2	3	M12-1.25 X 60MM HEX HEAD BOLT
2	4	M12-1.25 X 30 MM HEX HEAD BOLT
4	5	1/2" FLAT WASHER
4	6	1/2" LOCK WASHER
2	7	M8-1.25 X 25MM HEX HEAD BOLT
4	8	3/8" FLAT WASHER
2	9	3/8" LOCK WASHER
2	10	SPACER TUBE

STEP 1 REMOVE CONTENTS FROM BOX AND VERIFY ALL PART ARE PRESENT. READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING.

STEP 2 IT MAY BE NECESSARY TO REMOVE/RELOCATE FRONT LICENSE PLATE AND LICENSE PLATE BRACKET. IT IS NOT REQUIRED, BUT SRONGLY RECOMMENDED.

STEP 3 REMOVE TOW HOOKS BY REMOVING FRONT AND REAR TOW HOOK BOLTS. BOLTS WILL BE TIGHT. NOTE: TOW HOOKS WILL NOT BE REINSTALLED.

STEP 4 SLIDE BULL BAR ASSEMBLY THROUGH TOW HOOK OPENINGS AND ATTACH AS SHOWN. SEE FIGURE 2.

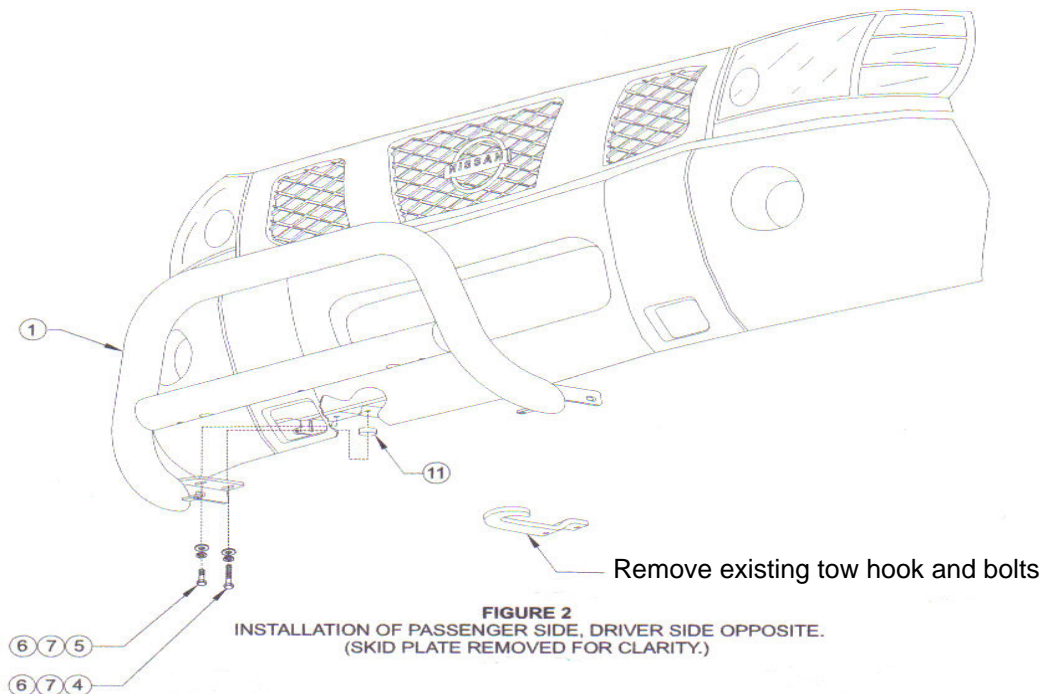

FINISH PROTECTION- ARIES PRODUCTS HAVE A HIGH FINISH THAT MUST BE MAINTAINED SUCH AS ANY OTHER HIGH FINISH PRODUCT ON THE VEHICLE. PROTECT THE FINISH WITH A NON-ABRASIVE AUTOMOTIVE WAX. THE USE OF SOAP, POLISH, OR WAX THAT CONTAINS ABRASIVES IS DETRIMENTAL, AS THE COMPOUNDS SCRATCH THE FINISH AND OPEN IT TO CORROSION.

DISCLAIMER- BUYER ASSUMES ALL RISK AND LIABILITY WHATSOEVER FROM THE INSTALLATION AND USE OF ARIES PRODUCTS. ARIES PRODUCTS ARE SOLD AS DECORATIVE ACCESSORIES AND SHOULD NOT BE RELIED UPON AS PROTECTION FOR THE VEHICLE OR OCCUPANTS IN THE EVENT OF A COLLISION OR ROLL OVER. ARIES AUTOMOTIVE ASSUMES NO LIABILITY FOR INJURY, LOSS, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN THE EVENT OF A COLLISION OR ROLLOVER.