

56056

GMC ACADIA

WIRING LOCATION GUIDE
GUÍA DE UBICACIÓN DEL CABLEADO
IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

6/4/2010

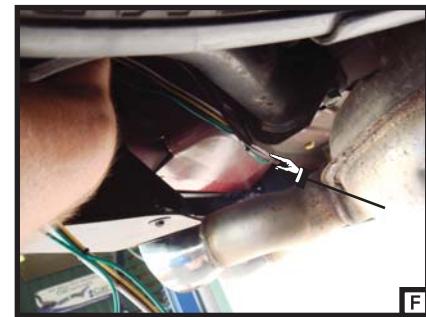

English

1. Open the rear hatch and remove the taillight assemblies by removing two 7 mm bolts holding them in place. **A** Pull out on taillight assembly being sure not to damage the alignment tabs. Behind the taillight assemblies locate the vehicles taillight wiring harness. The harness will have connector similar to those on the T-connector harness. **B** Separate the connectors being sure not to damage the locking tabs. **C**

2. Starting on the drivers side route the T-connector end with the yellow wire up from under the vehicle through the opening under the taillight assembly. **D** Insert the T-connector end with the yellow wire in-between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place. **E**

3. Route the T-connector end with the green wire to the passenger side along the back side of the bumper being sure to avoid any area's that may damage the wire (i.e. exhaust). **F** Repeat step 2 on the passenger side using the green wire.

4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

5. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location. Secure any loose wires with the cable ties provided.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.